

IGS®

# Golden Shamrock

Operator Manual



# Table of Contents

<b>1. Hardware</b> .....	<b>2</b>
Hardware Connection .....	2
Connecting Touch Panel (Optional) .....	3
Connection Diagram .....	4
DIP Switch Settings .....	5
36 & 10 PIN Button Layout.....	5
Solving Ticket SSR Error.....	6
Reset.....	7
<b>2. Bookkeeping &amp; Adjustment</b> .....	<b>10</b>
Access Flow Chart .....	10
System Settings .....	11
Chance Settings .....	12
Touch Screen Calibration .....	12
<b>3. Game Introduction</b> .....	<b>13</b>
Features .....	13
Main Game.....	13
Jackpot.....	14
Wild Rainbow Feature .....	15
Free Game .....	17
Double Game .....	18
<b>4. Win Rules</b> .....	<b>19</b>
Encouraging Higher Play .....	19
Odds Table .....	19
Line Chart.....	20

# 1. Hardware


## Hardware Connection



### A RS-232


Connects to optional Citizen printer/ticket dispenser.

\* Use Belkin #F2L044 (serial printer cable/null modem) for Citizen printer.

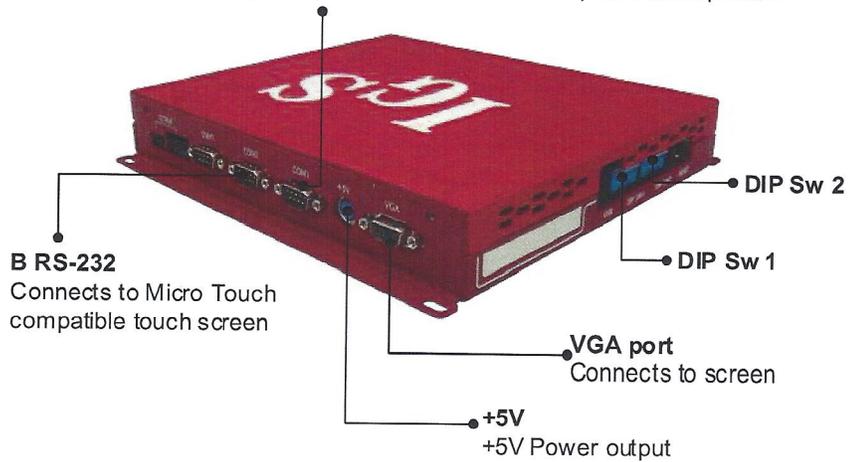

## Connecting Touch Panel (Optional)


### Type A

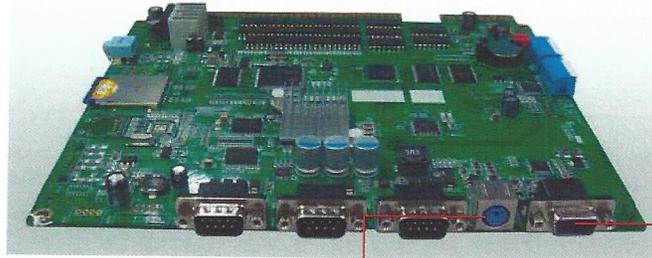

Power +5V Connector  
(Female)

Monitor Connector  
(15PIN Female)

- Refer to the diagram below to connect the touch screen.
- After the connection, remember to adjust the Pin 1 of **DIP SW1** to **ON** to enable touch mode.

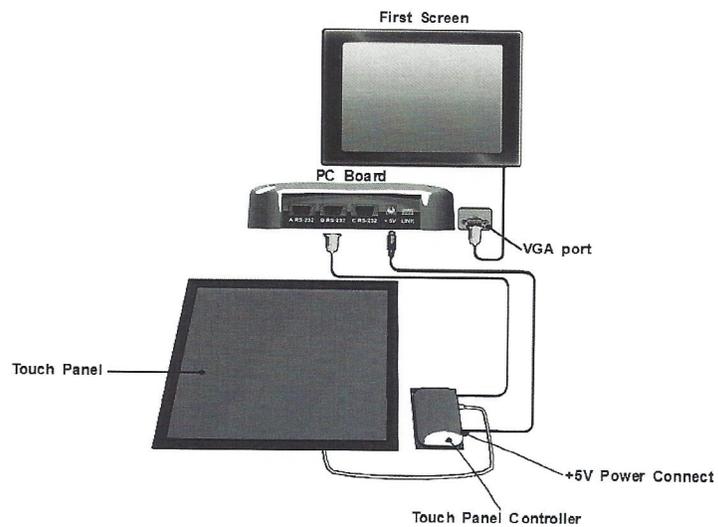



## Connection Diagram


36 Pins (6 Buttons)			10 Pins (6 Buttons)		
PARTS SIDE		SOLDER SIDE	PARTS SIDE		SOLDER SIDE
	1		GND	1	GND
SPEAKER_R	2		GND	2	GND
SPEAKER_L	3	GND	+5V	3	+5V
	4		+5V	4	+5V
	5		+12V	5	+12V
	6		HOP-VCC	6	
TICKET OUT	7		TICKET SSR	7	
TICKET SWITCH	8			8	
START / ALL STOP	9		GND	9	GND
STOP4/SMALL/HELP	10		GND	10	GND
STOP5/PLAY	11				
STOP1/TAKE	12				
STOP3/DOUBLE/SELECT LINE	13				
	14				
STOP2/BIG/HOLD PAIR	15				
	16				
	17				
COIN A	18	KEY IN			
	19	COIN C			
RECORD	20	TEST			
	21	KEY OUT/PRINTER OUT			
	22				
COIN A METER	23				
KEY IN METER	24				
	25				
COIN C METER	26				
OUT METER	27				
	28				
LAMP: START/ALL STOP	29				
LAMP: STOP4/SMALL/HELP	30				
LAMP: STOP5/PLAY	31	LAMP: COUNT			
LAMP: STOP1/TAKE	32				
LAMP: STOP3/DOUBLE/SELECT LINE	33				
LAMP: STOP2/BIG/HOLD PAIR	34				
	35				
GND	36	GND			

## DIP Switch Settings

DIP SWITCH 1		1	2	3	4	5	6	7	8
TOUCH	OFF	OFF							
	ON	ON							

## 36 & 10 PIN Button Layout

### 6 Buttons

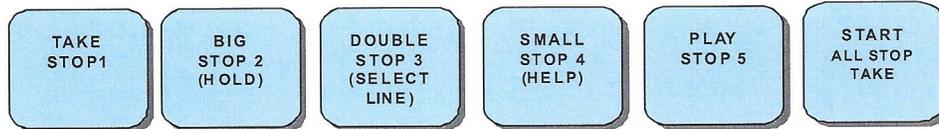


## Solving Ticket SSR Error

After powering on the machine, if the hopper keeps working and can't be stopped, it could be that the Ticket SSR's jump setting is incorrect.

### How to solve:

1. Locate the Ticket SSR jump (JP12) on the PC board. Then identify current TICKET SSR is at HIGH ACTIVE or LOW ACTIVE.

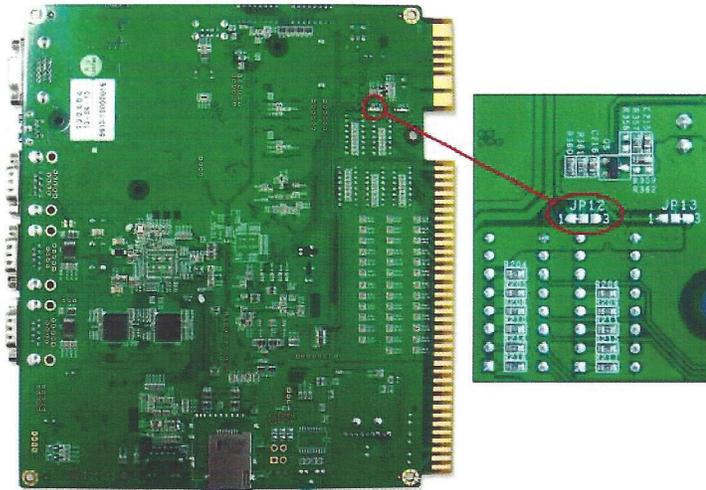

2. Change to use the alternative JP12 setting.

JP12	Low Active	3	2	1	Short pins 1-2
	High Active (Default)	3	2	1	

## Reset

1. Power off the machine and then power on.
2. Press and hold the 【TEST】 button until the game enters the CHECKING SYSTEM page.
3. Enter the 「TEST」 page.



4. Press the 【PLAY】 button to enter the 「TEST 2」 PAGE (PAGE 2).




5. Press the 【STOP3】 button to enter the 「RESET」 page.



6. Press the 【PLAY】 button to RESET the game to default value.




7. Press the **【PLAY】** button again to confirm RESET or press ANY button to EXIT.

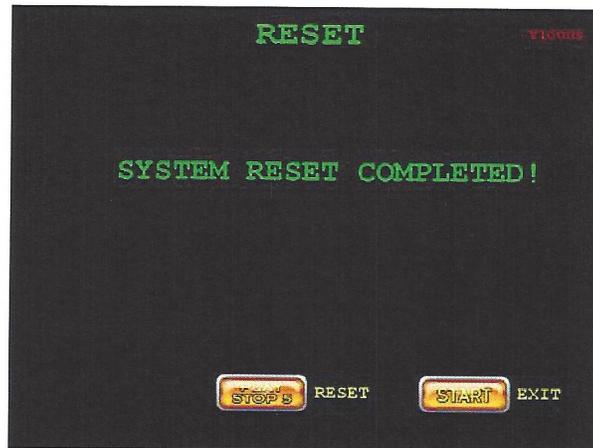

8. After RESET is completed, it displays SYSTEM RESET COMPLETED on the screen.
9. Power off the machine and then power on to complete the Reset procedure.

## 2. Bookkeeping & Adjustment Access Flow Chart

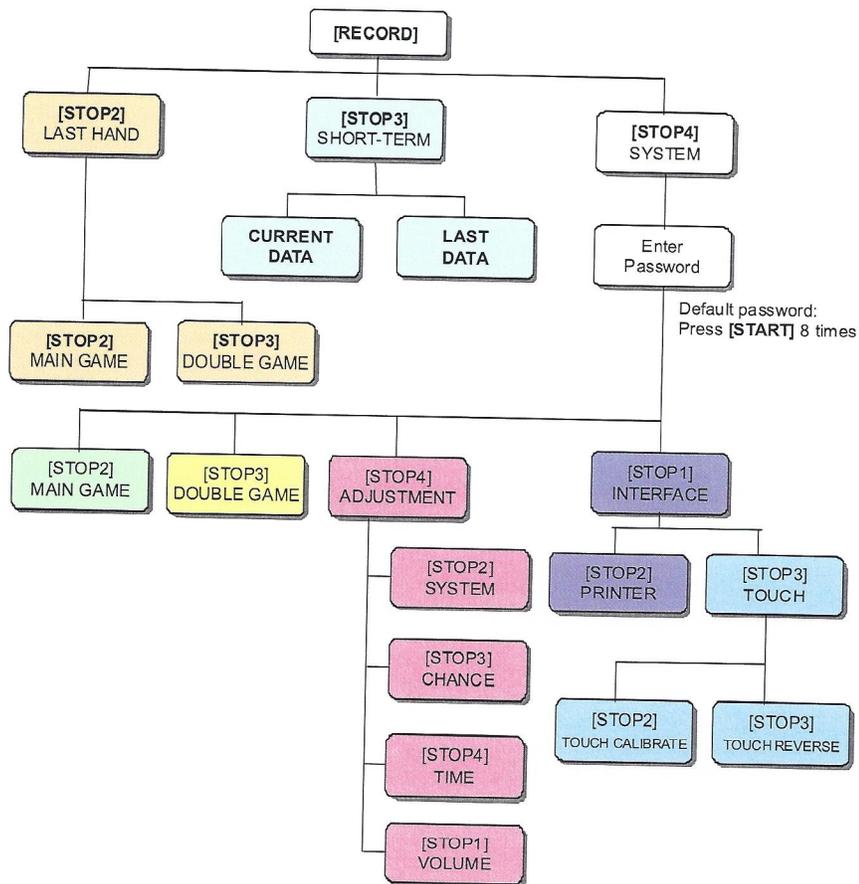


## System Settings

ITEMS	SETTING SELECTION	DEFAULT
MAX. LINE PLAY	2, 4, 8, 10, 15, 20	20
MIN. PLAY(TOTAL)	1, 5, 10, 15, 25	25
MIN. PLAY FOR JACKPOT	1, 5, 10, 15, 25	25
JACKPOT MAX	15000, 20000, 50000, 70000, 100000, 150000, 200000	50000
COIN RATE	1,5,10,20,25,50,100,200,500,1000	25
KEY IN RATE		100
KEY OUT RATE		1
TICKET RATE		500
GAME TICKET	1,2,3,4,5,8,10,CONTINUES	CONTINUES
INTERFACE	DISPENSER , PRINTER ,ATTENDANT	PRINTER
PRINTER COMMAND	CBM1 , ESC/POS , ESC/POS2 , STAR	CBM1
DISPLAY	CREDIT, 1C, 5C, 10C, 20C, 25C, 50C, \$1	CREDIT
SYSTEM LIMIT	NO,YES	NO
DEMO MUSIC	NO,YES	YES
NON-STOP	NO,YES	NO
PASSWORD	NO,YES	NO
ODDS TABLE	NO,YES	YES
HOLD PLAY	NO,YES	YES
AUTO PLAY	NO,YES	YES
DOUBLE GAME	NO,YES	YES
JACKPOT MODE	PROGRESSIVE, RANDOM	PROGRESSIVE

## Chance Settings

ITEMS	SETTING SELECTION	DEFAULT
MAIN GAME LEVEL	LEVEL1(Easiest), LEVEL2,LEVEL3, LEVEL4,LEVEL5,LEVEL6(Hardest)	LEVEL 6
DOUBLE GAME LEVEL	85%, 90%, 95%	95%

## Touch Screen Calibration

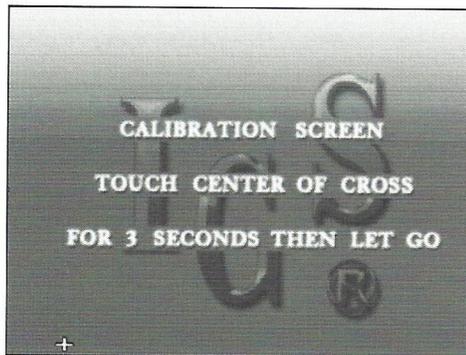

1. If a touch screen is connected, press **[RECORD]> [SYSTEM]>[INTERFACE]> [TOUCH]** and follow the on-screen prompts to enter the calibration screen.
2. Touch center of the cross on the screen for 3 seconds.
3. Follow the cross when it moves till the calibration is completed.

## 3. Game Introduction

### Features

- 25 Lines.
- Max. Win up to 500,000.
- 3 sets of Jackpot: progressive / random mode is adjustable.
- Hold Pair Feature: Select the desired Hold Symbol and Re-spin the symbols you don't want. Press Hold-Pair button to swap the Symbols.
- Touch screen / Auto play support.

### Main Game

LUCKY RAINBOW is a 5 reels & 25 lines game.



## Jackpot

- With 5  on the screen, player will win the JACKPOT 1.
- With 4  on the screen, player will win the JACKPOT 2.
- With 3  on the screen, player will win the JACKPOT 3.



## Wild Rainbow Feature



- Max. Line play for the WILD RAINBOW FEATURE.
- Wild Rainbow will randomly trigger to make 2nd, 3rd or 4th reel become ALL WILD.
- Wild symbol can substitute for all symbols except JACKPOT and SCATTER symbols.

## Pot of Gold Bonus Game



- 3, 4 or 5 symbols can trigger BONUS GAME or FREE GAME.
- Select BONUS GAME to enter Pot of Gold Bonus Game.
- Gold Coins will spill out from pots of gold.
- Press START button in 20 seconds to collect all the coins on the screen.
- If player did not press START button in 20 seconds, the coins will be collected automatically.
- Players can either TAKE or RETRY in the Bonus Game.



## Free Game



- 3, 4 or 5  symbols can trigger BONUS GAME or FREE GAME.
- Select FREE GAME to trigger free spins.
- 3  symbols award 10 free spins.
- 4  symbols award 15 free spins.
- 5  symbols award 20 free spins.
- 5 symbols appears on the small reels will be used in the FREE GAME to increase the winning possibility.

## Double Game



- Press 「DOUBLE」 button to play Double Game when there is a win.
- Choose  or  to play double game.
- The winnings will be doubled if you guess right.

## 4. Win Rules

### Encouraging Higher Play

Jackpot Random

MIN. TOTAL PLAY	JACKPOT
25	100%

### Odds Table

JACKPOT 1 25909		JACKPOT 2 10782		JACKPOT 3 2376	
MIN PLAY 25 FOR JP					
 <p><b>Scatter</b> 3 or more scatter symbols on the screen trigger <b>BONUS GAME</b> or <b>FREE GAME</b>.</p>		 <p><b>Wild</b> can substitute for all symbols except  and .</p>			
 <p>X5 25000 X4 2500 X3 250</p>	 <p>X5 10000 X4 1000 X3 100</p>	 <p>X5 6000 X4 600 X3 60</p>	 <p>X5 4500 X4 450 X3 45</p>	 <p>X5 3000 X4 300 X3 35</p>	
 <p>X5 2000 X4 250 X3 25</p>	 <p>X5 1000 X4 150 X3 15</p>	 <p>X5 750 X4 75 X3 10</p>	 <p>X5 500 X4 50 X3 8</p>	 <p>X5 250 X4 15 X3 5</p>	

Line Chart





**IGS** INTERNATIONAL GAMES SYSTEM CO.,LTD.  
TEL:886-2-2299 4692 FAX:886-2-2299 4687 <http://sales.igs.com.tw>

V100US