



V Touch User Manual

USA Exclusive Representative:



www.americanalphainc.com

In Cooperation With:

[V005US]


CONTENT

Connection Diagram	1
36 & 10 PIN BUTTON LAYOUT.....	2
DIP SWITCH SETTING	2
BOOKKEEPING & ADJUSTMENT.....	3
System Adjustment in General	4
Chance Adjustment	5
System Adjustment for individual game	6
HOW TO PLAY	1 1

Connection Diagram

36 Pins			10 Pins		
PARTS SIDE		SOLDER SIDE	PARTS SIDE		SOLDER SIDE
	1		GND	1	GND
	2		GND	2	GND
SPEAKER	3	GND	+5V	3	+5V
	4		+5V	4	+5V
	5		+12V	5	+12V
	6			6	
TICKET OUT	7		TICKET SSR	7	
TICKET SWITCH	8			8	
START/ALL STOP	9			9	
STOP4/SMALL/HELP	10		GND	10	GND
STOP5/PLAY	11				
STOP1/TAKE/MENU	12				
STOP3/DOUBLE/SELECT LINE	13				
	14				
	15				
STOP2/HOLD PAIR/BIG	16				
	17				
COIN A	18	KEY IN			
	19	COIN C			
RECORD	20	TEST			
	21	KEY OUT/PRINTER OUT			
	22				
COIN A METER	23				
KEY IN METER	24				
	25				
COIN C METER	26				
OUT METER	27				
	28				
LAMP: START/ALL STOP	29				
LAMP: STOP4/SMALL/HELP	30				
LAMP: STOP5/PLAY	31	LAMP: COUNT			
LAMP: STOP1/TAKE	32				
LAMP: STOP3/DOUBLE/SELECT LINE	33				
LAMP: STOP2/HOLD PAIR/BIG	34				
	35				


36 & 10 PIN BUTTON LAYOUT

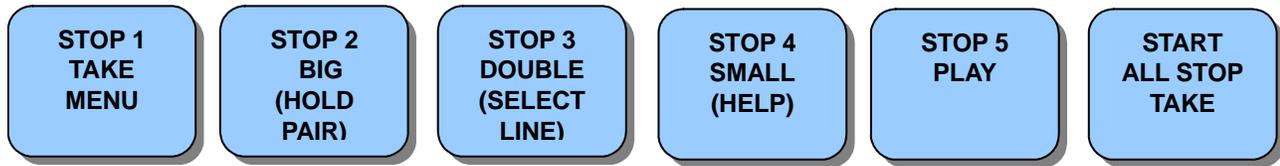

DIP SWITCH SETTING

DIP Switch 1		1	2	3	4	5	6	7	8
DIP Switch 2		1	2	3	4	5	6	7	8
POKER	ON		OFF						
	OFF		ON						
SUPER KENO	ON			OFF					
	OFF			ON					
BONUS BUY KENO	ON				OFF				
	OFF				ON				

BOOKKEEPING & ADJUSTMENT

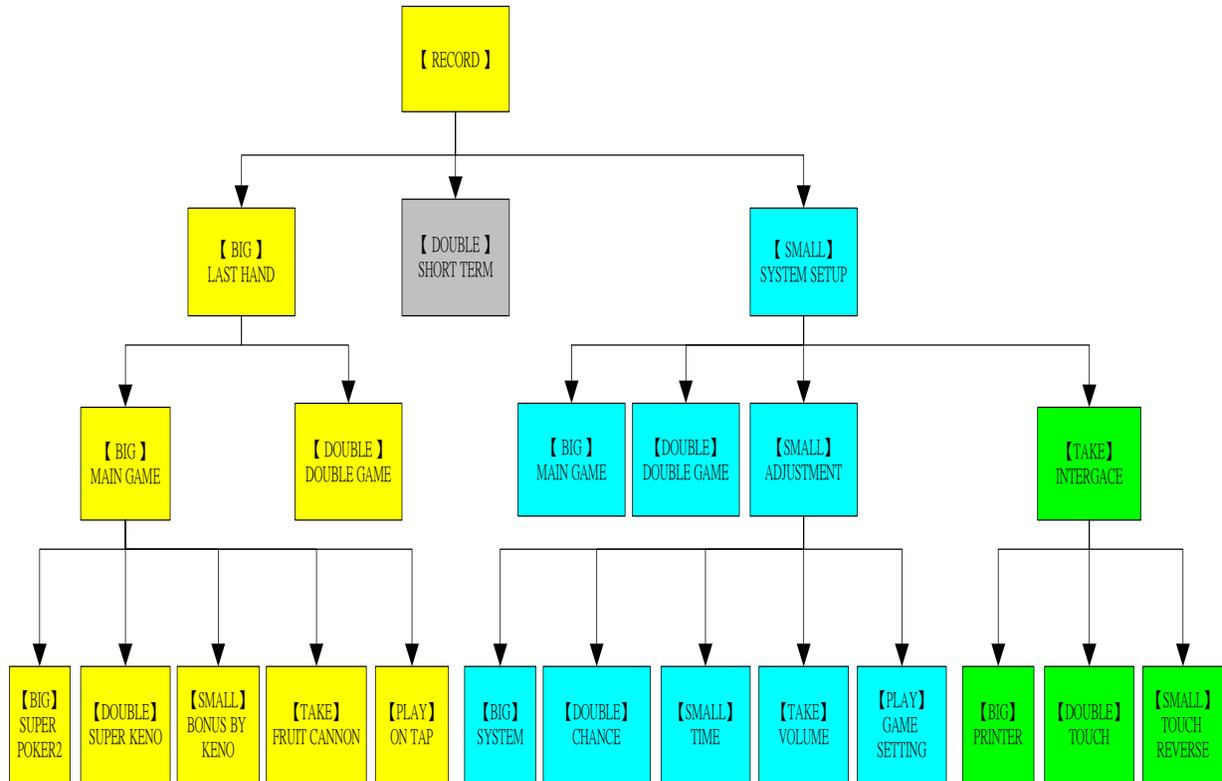

System Adjustment in General

ITEMS	SETTING SELECTIONS	DEFAULT
MYSTERY MAX	10000,20000,50000,100000,200000,300000, 400000, 500000	300000
COIN RATE		25
KEY IN RATE	1, 2, 4, 5, 10, 15, 20, 25, 30, 40, 50, 60, 75, 80, 100,	100
KEY OUT RATE	200, 250, 400,500, 1000	1
TICKET RATE		500
GAME TICKET	1, 2, 3, 4, 5, 8, 10, CONTINUOUS	CONTINUOUS
INTERFACE	DISPENSER, PRINTER, ATTENDANT	DISPENSER
PRINTER COMMAND	CBM1, ESC/POS, STAR	CBM1
SYSTEM LIMIT	NO, YES	NO
AUTO TICKET	NO, YES	NO
NON STOP	NO, YES	NO
PASSWORD	NO, YES	NO
ODDS TABLE	NO, YES	YES
SCORE BOX	NO, YES, 10X	NO
PLAY SCORE	NO, YES	YES
HAND COUNT	NO, YES	NO
HOLD PAIR	NO, REGULAR, SKILL	YES
DOUBLE GAME	NO, YES	YES

Remark :

- 1.MYSTERY BASE= MESTERY MAX / 2 ◦
- 2.HOLD PAIR : ONLY FOR SLOT GAMES ◦
- 3.NON STOP : ONLY FOR SLOT GAMES ◦
- 4.DOUBLE GAME : NOT FOR KENO GAMES
- 5.AUTO PLAY: ONLY FOR 25 LINER SLOT GAME ◦

Chance Adjustment

ITEMS	SETTING SELECTIONS	DEFAULT
MAIN GAME LEVEL	LEVEL 1 (easiest), LEVEL 2, LEVEL 3, LEVEL 4, LEVEL 5, LEVEL 6 (hardest)	LEVEL 6
DOUBLE GAME LEVEL	95%, 90%, 85%	95%

System Adjustment for individual game

● POKER

ITEMS	SETTING SELECTIONS	DEFAULT
MIN. BET	1,2,4,5,10,25,50,75,100	1
MAX. BET	50, 75, 100, 150, 200, 250 , 300, 500	150
MIN. BET FOR JACKPOT	1,2,4,5,10,25,50,75,100, 150	25
DISCARD	NO , YES	NO
AUTO HOLD	AUTO, WIN , ON	AUTO
MAX. JACKPOT	1000 , 5000 , 10000 , 15000 , 20000 , 30000 , 50000 , 100000 ,130000 ,150000 ,180000 ,200000 ,225000 ,250000	100000

Remark : Jackpot Base = Max.Jakcpot / 4

● SUPER KENO

ITEMS	SETTING SELECTIONS	DEFAULT
MIN. BET	1,2,4,5,10,20,50,100	10
MAX. BET	50, 100, 150, 200, 250 , 300 , 400 , 500	150
MIN.BET FOR JACKPOT	1,2,4,5,10,20,30,50,100, 150	20
MAX. JACKPOT	2000X , 3000X , 4000X ,5000X	2000X
GAME SPEED	FAST , NORMAL	NORMAL
MAX. WIN	50000, 100000 , 200000 , 300000, 400000, 500000	500000

Remark : Jackpot Base = 1000 X Min.Bet For Jackpot

● **BONUS BUY KENO**

ITEMS	SETTING SELECTIONS	DEFAULT
MIN. BET	1,2,4,5,10,20,50,100	10
MAX. BET	50, 100, 150, 200, 250, 300, 400, 500	150
MIN. BET FOR JACKPOT	1,2,4,5,10,20,30,50,100, 150	20
MAX. JACKPOT	2000X, 3000X, 4000X, 5000X	2000X
GAME SPEED	FAST, NORMAL	NORMAL
MAX. WIN	50000, 100000, 200000, 300000, 400000, 500000	500000

Remark : Jackpot Base = 1000 X Min.Bet For Jackpot

● **FRUIT CANNON**

ITEMS	SETTING SELECTIONS	DEFAULT
MIN. BET	1, 3, 5, 8, 10, 16, 20, 24,48,72,96	8
MAX. BET	48, 72, 96, 128, 160, 240, 320, 400, 480	128
MIN. BET FOR JACKPOT	1, 3, 5, 8, 10, 16, 20, 24	8
MAX. JACKPOT	1000, 5000, 10000, 15000, 20000, 30000, 50000, 100000, 130000, 150000, 180000, 200000, 225000, 250000	50000

Remark : Jackpot Base = Max.Jakcpot / 4

● **ON TAP**

ITEMS	SETTING SELECTIONS	DEFAULT
MIN. BET	1, 5, 10, 15, 20, 25,50,100	10
MAX. LINE BET	2, 4, 6, 8, 10, 12 , 14, 16, 20	4
MIN.BET FOR JAKCPOT	1, 5, 10, 25, 50	25
AUTO PLAY	ON , OFF	ON
MAX. JACKPOT	1000 , 5000 , 10000 , 15000 , 20000 , 30000 , 50000 , 100000 ,130000 ,150000 ,180000 ,200000 ,225000 ,250000	100000

Remark : Jackpot Base = Max.Jakcpot / 4

Encouraging Higher Play

(1) : ON TAP

JACKPOT

Any 5  on screen, gets the Jackpott.

MIN. TOTAL PLAY FOR JP	JACKPOT
25	29244



ENCOURAGING HIGHER PLAY

PLAY (25 LINER)

Win paid from left to right and right to left :

PLAY LINES	LINE PLAY	TOTAL PLAY	WIN LINES
25	1	25	1 - 10
25	2	50	1 - 25



(2) FRUIT CANNON

ENCOURAGING HIGHER WAGERS

MIN. PLAY	JACKPOT
8	14061

MYSTERY JACKPOT



PLAYER CAN RANDOMLY WIN THE "MYSTERY JACKPOT"




CANNON MAN FEATURE



3 LEVELS OF PLAYS TO ACTIVATE THE CANNON MAN FEATURE AND UP TO 5 CANNON MEN WILL LAUNCH.

PLAY	18	40	48
CANNON MAN	1	3	5




(3) SUPER POKER

FIVE JOKER	100000
ROYAL FLUSH	50000
5 OF A KIND	25000
STR. FLUSH	12500
4 OF A KIND	7500
FULL HOUSE	1250
FLUSH	875
STRAIGHT	625
3 OF A KIND	375
TWO PAIRS	250
7 BETTER	125

(4) SUPER KENO

• SUPER BALL KENO ODDS

PICKS	2	3	4	5	6	7	8	9	10
HITS 0	0	0	0	0	0	0	0	0	0
1	1100	200	100	100	0	0	0	0	0
2		2600	500	200	200	100	100	0	0
3			6000	1100	700	400	200	200	100
4				7500	3000	1200	600	500	400
5					12500	7500	1700	1400	800
6						JACKPOT	12000	5500	2400
7							JACKPOT	JACKPOT	10000
8								JACKPOT	JACKPOT
9									JACKPOT
10									JACKPOT

Wins when play amount is 100

Press ↑↑, ↓↓ buttons to see how the win will be affected by the play.

PLAY PLAY NEXT PAGE EXIT

(5) BONUS BUY KENO

• BONUS BUY KENO ODDS

PICKS	2	3	4	5	6	7	8	9	10
HITS 0	0	0	0	0	0	0	0	0	20
1	20	0	0	0	0	0	0	0	0
2	160	40	20	20	0	0	0	0	0
3		840	180	40	20	20	20	0	0
4			1720	480	200	80	40	20	20
5				4300	2600	680	200	160	80
6					7000	4900	1900	1100	400
7						10000	10000	5200	2300
8							JACKPOT	10000	7000
9								JACKPOT	JACKPOT
10									JACKPOT

Wins when play amount is 20

Press ↑↑, ↓↓ buttons to see how the win will be affected by the play.

PLAY PLAY NEXT PAGE EXIT

HOW TO PLAY

ON TAP

- JACKPOT



Any 5 on screen, win the JACKPOT.



- BONUS GAME



With 3 symbols or more on the screen, the player enters the Bonus Game.



- Player can select 1 character each round.
- The Bonus Game finishes when the selected character gets drunk.

● **FEATURE GAME**



With 3  symbols or more on the screen, the player enters the Feature Game.



➤ With 3  in line, player gets an extra spins.

FRUIT CANNON

- JACKPOT GAME



With 3 or more  symbols on the screen, player enters the JACKPOT GAME.



➤ Player can win this Jackpot when have the following symbols collected.

- FEATURE GAME



➤ The 3 Level Cannon Man feature can be actived with 1, 3 or 5 cannon balls.

● **WILD**



- Under a Non-Win Play but with Wild symbol on the screen, A Wild Respin will be Triggered for Another Chance.

SUPER KENO



• SUPER BALL KENO ODDS

HITS	2	3	4	5	6	7	8	9	10
0	0	0	0	0	0	0	0	0	0
1	0	0	0	0	0	0	0	0	0
2	1100	200	100	100	0	0	0	0	0
3		2600	500	200	200	100	100	0	0
4			6000	1100	700	400	200	200	100
5				7500	3000	1200	600	500	400
6					12500	7500	1700	1400	800
7						JACKPOT	12000	5500	2400
8							JACKPOT	JACKPOT	10000
9								JACKPOT	JACKPOT
10									JACKPOT

Wins when play amount is 100

Press ↑↑, ↓↓ buttons to see how the win will be affected by the play.

- Pick from 2 to 10 spots on the card by touching the numbers desired. Touch the number again to clear pick.



- Touch the  to clear all picked spots.



- Touch the  for a random pick.



- Touch the  to raise or lower the play amount.

- Player wins the prize according to the odds list on the right side. If the last spot hits a prize, player wins 4 times of the amount shown on the odds list (0000000).

BONUS BUY KENO



BONUS BUY KENO ODDS

PICKS	2	3	4	5	6	7	8	9	10
HITS 0	0	0	0	0	0	0	0	0	20
1	20	0	0	0	0	0	0	0	0
2	160	40	20	20	0	0	0	0	0
3		840	180	40	20	20	20	0	0
4			1720	480	200	80	40	20	20
5				4300	2600	680	200	160	80
6					7000	4900	1900	1100	400
7						10000	10000	5200	2300
8							JACKPOT	10000	7000
9								JACKPOT	JACKPOT
10									JACKPOT

Wins when play amount is 20

Press ↑↑, ↓↓ buttons to see how the win will be affected by the play.

- Pick from 2 to 10 spots on the card by touching the desired numbers. Touch the number again to clear pick..



- Touch the  to clear all picked spots.



- Touch the  to for a random pick.



- Touch the  to raise or lower the play amount

- When your card expects just one more hit for a prize and the value of the Extra Ball is over 1 credit, the game will activate the Bonus Buy Feature.

- There are more ways to win the progressive jackpot at higher play amounts.