

IGS®

HIGH ROLLER CLUB



Operator Manual


Table of Contents

1. Hardware.....	3
Hardware Connection	3
Connecting Touch Panel (Optional).....	4
Connection Diagram.....	5
DIP Switch Settings.....	6
36 & 10 PIN Button Layout	7
Solving Ticket SSR Error.....	7
Reset.....	8
2. Bookkeeping & Adjustment	11
Access Flow Chart	11
System Settings.....	12
Chance Settings	13
Touch Screen Calibration	13
3. Introduction	14
Common Features	14
Lobby	14
4. (Game 1) Happy Hour.....	15
Game Rule	15
Wild Feature	16
Multiple Feature.....	17
Respin Feature	18
Bonus Game	19
Free Game	20
Jackpot.....	21
Line Chart	22
5. (Game 2) Lucky Shamrock	23
Game Rule	23
All Up Feature	24
Naughty Devil Feature.....	25
Wild Feature	26
Jackpot.....	27
Line Chart	28

6. (Game 3) Crazy Fishin'	29
Game Rule	29
Collective Wild Feature	30
Scatter Game	31
Bonus Game Stage 1	32
Bonus Game Stage 2	33
Free Game	34
Jackpot.....	36
Line Chart	37

1. Hardware


Hardware Connection

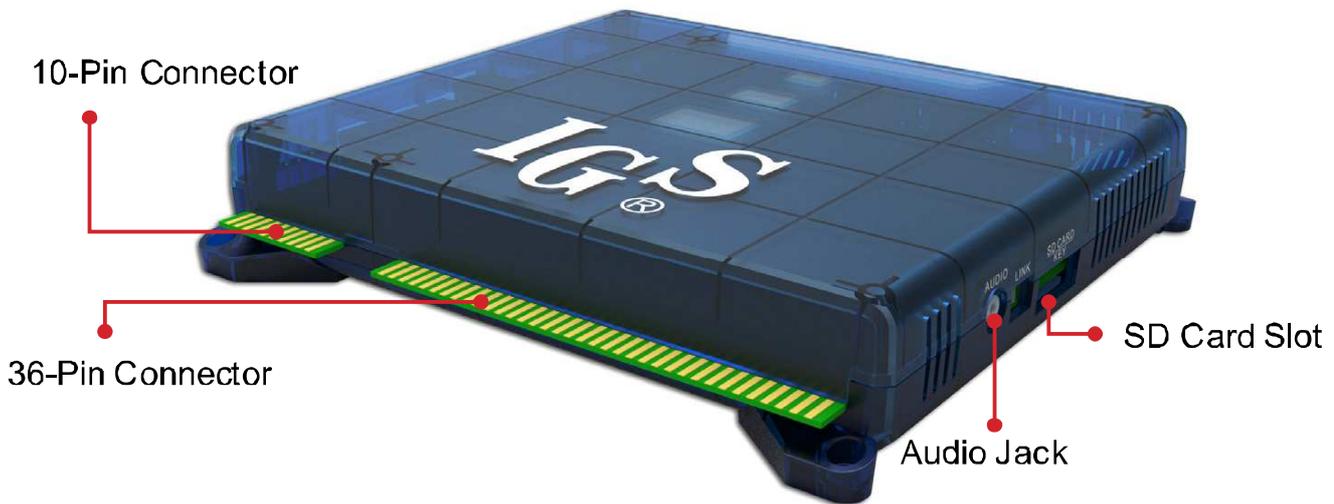

COM 1. RS-232


Connects to optional Citizen printer/ticket dispenser.

* Use Belkin #F2L044 (serial printer cable/null modem) for Citizen printer.

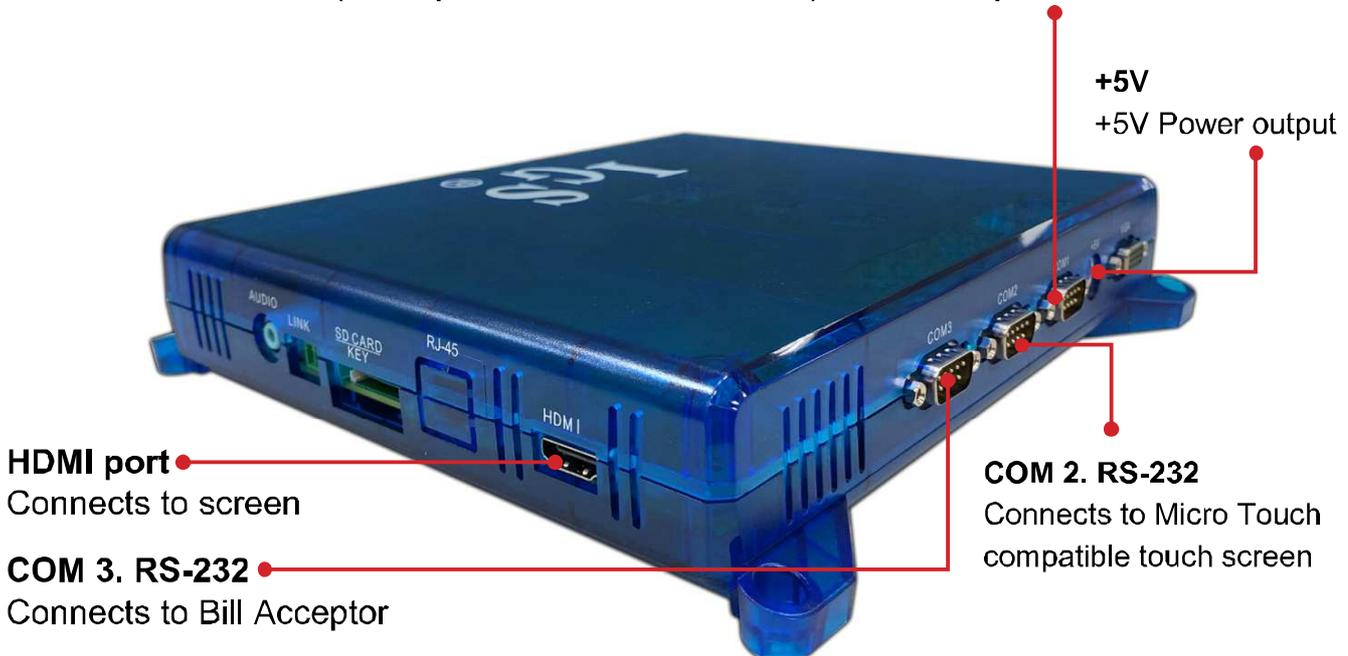

Connecting Touch Panel (Optional)

- Refer to the diagram below to connect the touch screen.
- High Roller Club supports only touch screen interface. Please make sure that the touch screen is well-connected before operating
- The resolution of this game is Full HD. Please confirm that a monitor supports Full HD resolution.
- The interface of a monitor can only use HDMI connector.

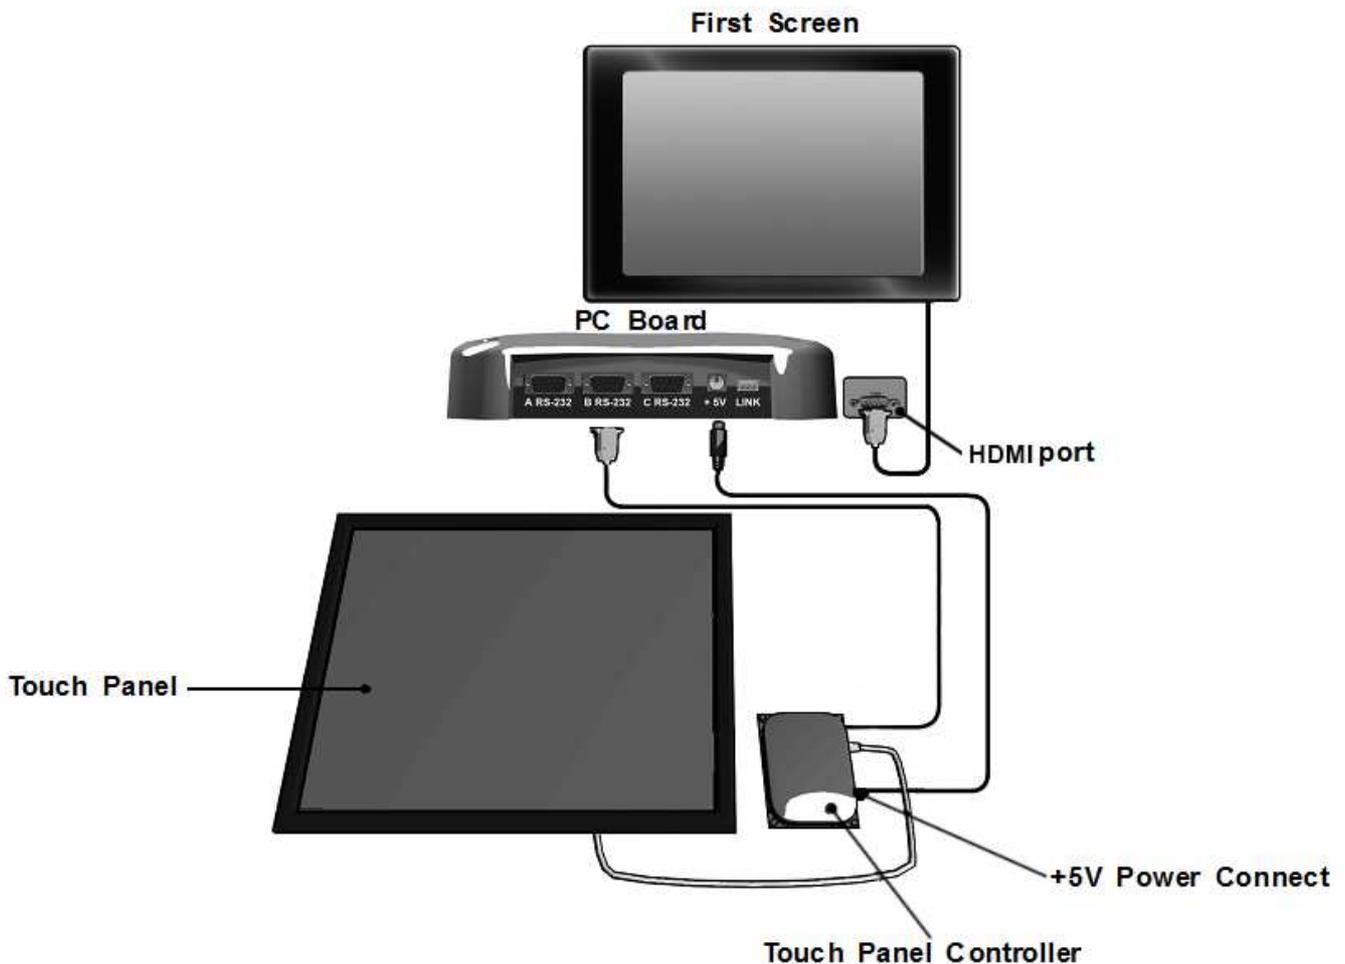

Connection Diagram

36 Pins (6 Buttons)		
PARTS SIDE		SOLDER SIDE
	1	
SPEAKER_R	2	
SPEAKER_L	3	GND
	4	
	5	
	6	
TICKET OUT	7	
TICKET SWITCH	8	
START / ALL STOP	9	
SMALL	10	START / ALL STOP
PLAY	11	
STOP1/TAKE	12	
STOP3/DOUBLE	13	
	14	
	15	
STOP2/BIG	16	
	17	
COIN A	18	KEY IN
	19	COIN C
RECORD	20	TEST
	21	KEY OUT/PRINTER OUT
	22	
COIN A METER	23	
KEY IN METER	24	
	25	
COIN C METER	26	
OUT METER	27	
	28	
LAMP: START/ALL STOP	29	
LAMP: SMALL	30	
LAMP:PLAY	31	LAMP: COUNT
LAMP: STOP1/TAKE	32	
LAMP: STOP3/DOUBLE	33	
LAMP: STOP2/BIG	34	
	35	
GND	36	GND

10 Pins (6 Buttons)		
PARTS SIDE		SOLDER SIDE
GND	1	GND
GND	2	GND
+5V	3	+5V
+5V	4	+5V
+12V	5	+12V
HOP-VCC	6	
TICKET SSR	7	
	8	
GND	9	GND
GND	10	GND

DIP Switch Settings

DIP SWITCH 2		1	2	3	4	5	6	7	8
BILL ACCEPTOR MODE	PLUSE		OFF						
	RS232		ON						

36 & 10 PIN Button Layout

2 Buttons



Solving Ticket SSR Error

After powering on the machine, if the ticket dispenser keeps working and can't be stopped, it could be that the Ticket SSR's jump setting is incorrect.

How to solve:

1. Locate the Ticket SSR jump (JP5) on the PC board. Then identify current **TICKET SSR** is at **HIGH ACTIVE** or **LOW ACTIVE**.




2. Change to use the alternative JP5 setting.

JP5	Low Active	3	2	1	Short pins 1-2
	High Active (Default)	3	2	1	

Reset

1. Power off the machine and then power on.
2. Press and hold the **[TEST]** button until the game enters the **CHECKING SYSTEM** page.
3. Enter the 「**TEST**」 page.

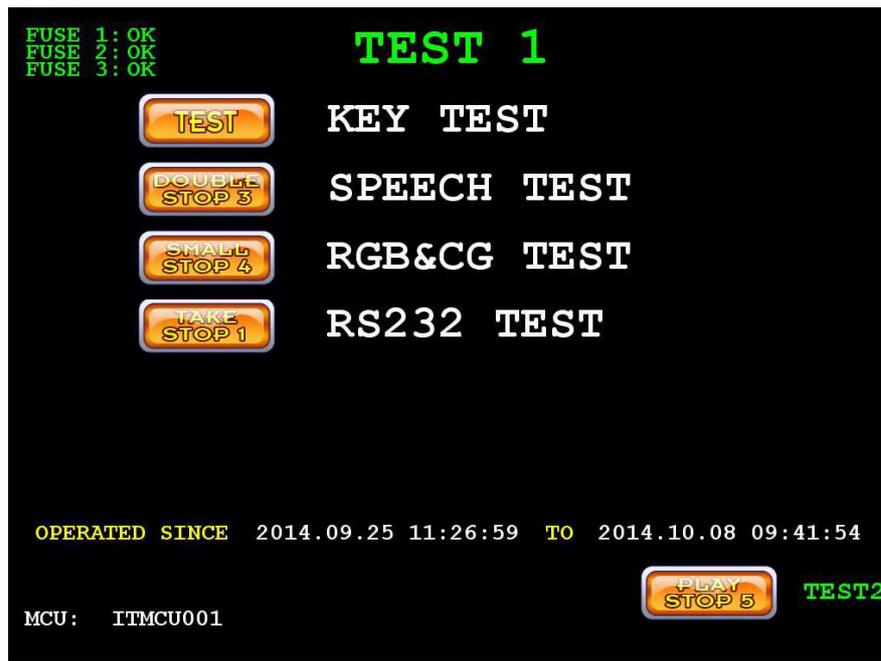

4. Press the **[PLAY]** button to enter the 「**TEST 2**」 PAGE (PAGE 2).



5. Press the **[STOP3]** button to enter the 「RESET」 page.



6. Press the **[PLAY]** button to **RESET** the game to default value.




7. Press the **【PLAY】** button again to confirm **RESET** or press **ANY** button to **EXIT**.



8. After **RESET** is completed, it displays **SYSTEM RESET COMPLETED** on the screen.
9. Power off the machine and then power on to complete the Reset procedure.

2. Bookkeeping & Adjustment

Access Flow Chart

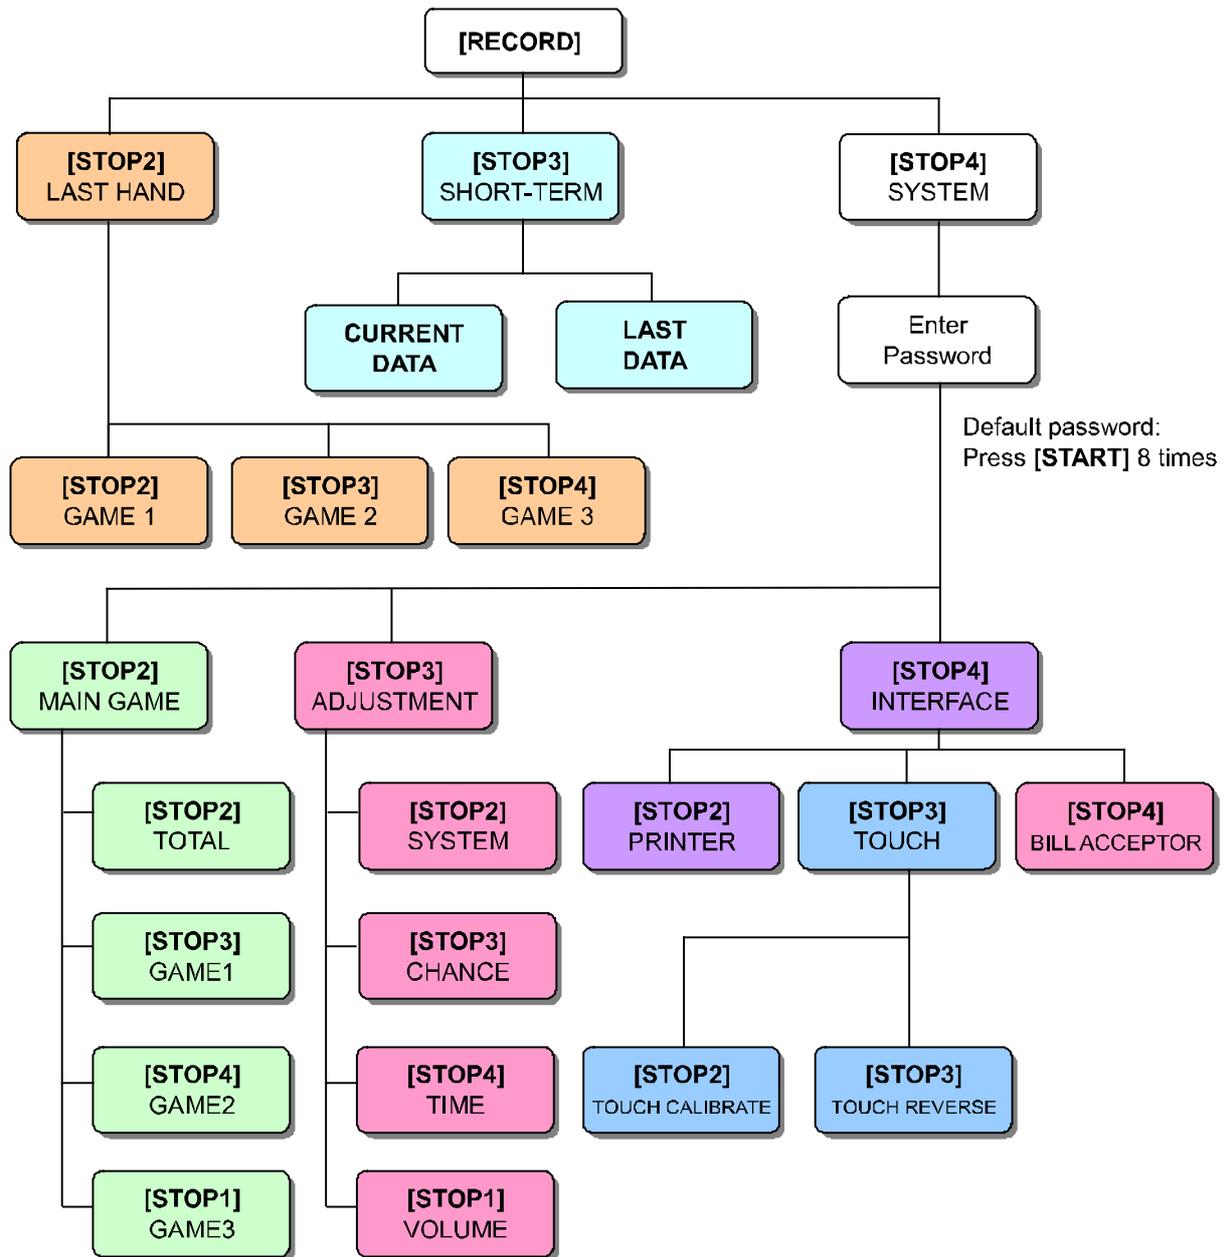

System Settings

ITEMS	SETTING SELECTION	DEFAULT
MAX. PLAY(TOTAL)	200, 250, 300, 400, 500	500
MIN. PLAY(TOTAL)	25, 50, 100, 150, 200	25
MIN. PLAY FOR JACKPOT	25, 50, 100, 150, 200	100
JACKPOT MIN	50000,80000,120000, 160000, 200000, 240000, 300000	120000
JACKPOT MAX	80000,120000,160000,200000, 240000, 300000, 500000	500000
COIN RATE	1,4,5,10,15,20,25,50,75,100,200,375,500,1000	100
KEY IN RATE		100
KEY OUT RATE		100
TICKET RATE		500
GAME TICKET	1,2,3,4,5,8,10, CONTINUOUS	CONTINUOUS
INTERFACE	DISPENSER , PRINTER ,ATTENDANT	PRINTER
PRINTER COMMAND	CBM1 , ESC/POS , ESC/POS2 CMB1_EPIC950	CBM1
SYSTEM LIMIT	NO, YES	NO
AUTO TICKET	NO, YES	NO
DEMO MUSIC	NO, YES	NO
PASSWORD	NO, YES	NO
SCORE BOX	NO, YES	NO
PLAY SCORE	NO, YES	YES
HAND COUNT	NO, YES	NO
DISPLAY	DOLLAR, CREDIT	DOLLAR

Chance Settings

ITEMS	SETTING SELECTION	DEFAULT
MAIN GAME LEVEL	LEVEL1(Easiest), LEVEL2,LEVEL3, LEVEL4,LEVEL5,LEVEL6(Hardest)	LEVEL 6

Touch Screen Calibration



1. If a touch screen is connected, press **[RECORD]> [SYSTEM]>[INTERFACE]> [TOUCH]** and follow the on-screen prompts to enter the calibration screen.
2. Touch center of the cross on the screen for 3 seconds.
3. Follow the cross when it moves till the calibration is completed.

3. Introduction

Common Features

- Single Line.
- Free Game/ Bonus Game /Feature.
- Configurable Jackpot.
- Touch screen / Auto play support.

Lobby

High Roller Club is a 3 in 1 Nudge multigame.



Game Menu

Payout Button

Credit

4. (Game 1) Happy Hour


Game Rule



- Press + or - to adjust your play.
- Press **START** to start a new game.
- Press **RAISE** or **LOWER** to move one symbol **UP** or **DOWN**. Only one move is allowed.
- Match the Winning Combination on the pay line and win the prize accordingly.
- A game ends if players move wrong symbol.


-  can substitute for all symbols except  ,  .

Wild Feature

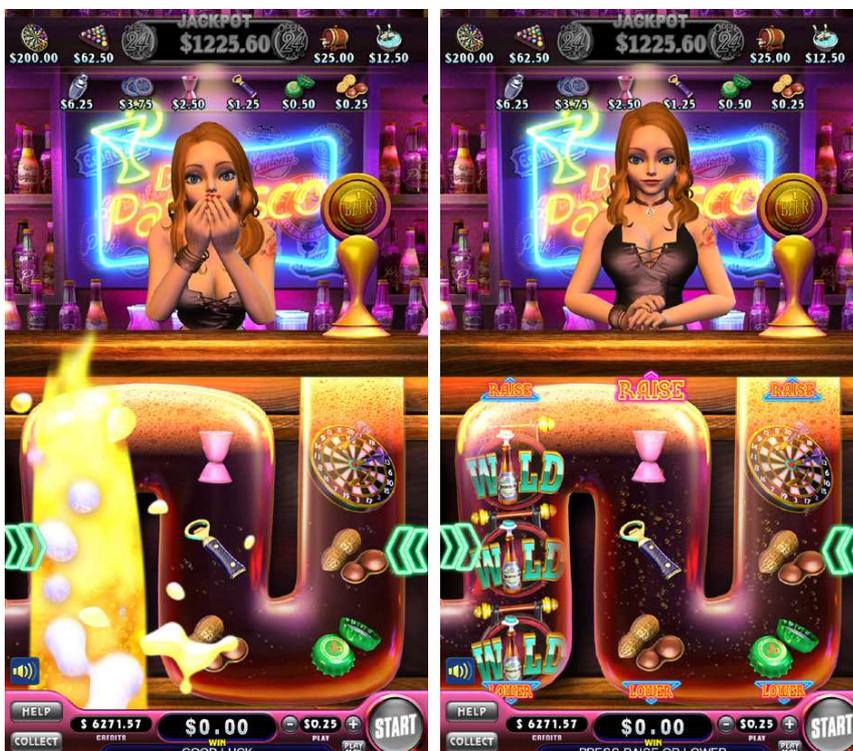


- Bartender will randomly spill the beer during game.
- Turning one reel into **WILD**.

Multiple Feature

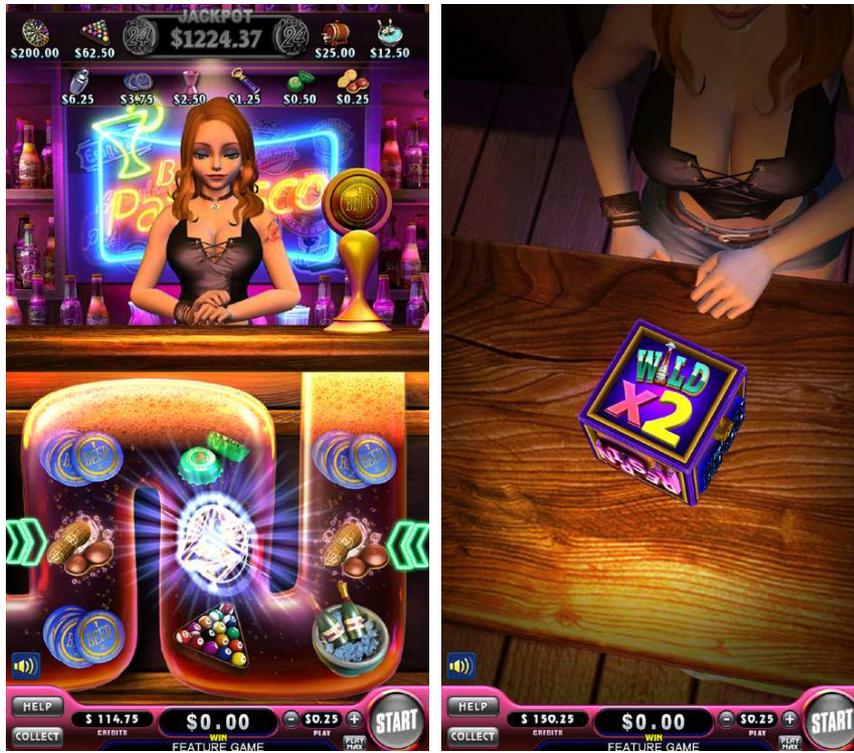

- Move the Dice Symbol to **PAY LINE**.
- **Multiple Feature** will be triggered if the dice shows **WILD**.
- The dice will reveal randomly the multiplier to increase the winning symbols' odds.

Respin Feature

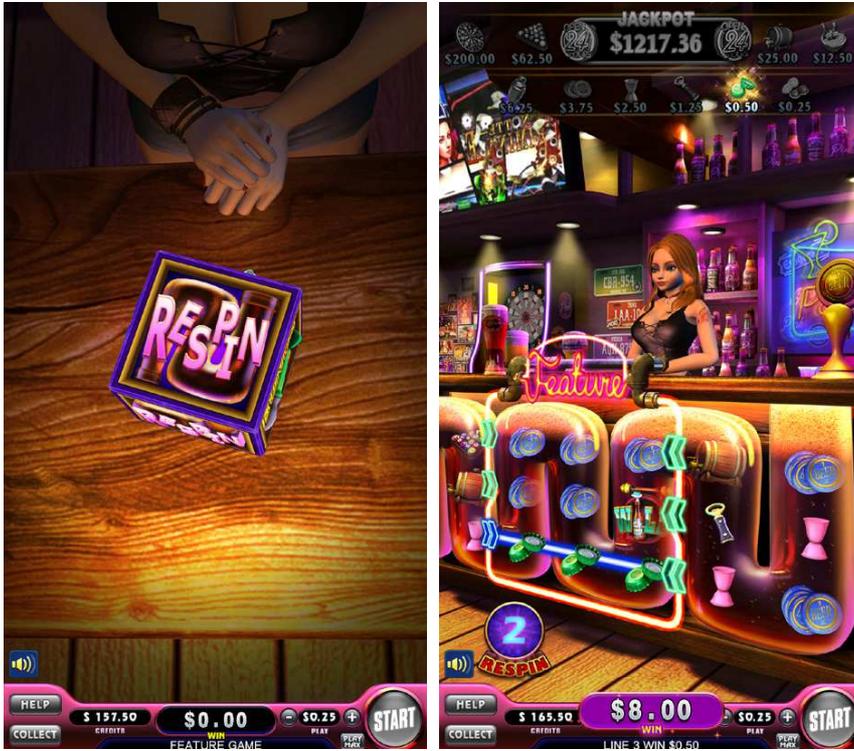


- Move the Dice Symbol to **PAY LINE**.
- **Respin Feature** will be triggered if the dice shows Respin Three times Respin will be given.
- **Respin Feature** will add 3 more reels and 3 more **PAY LINES**.
- The bartender will randomly move the **PAY LINE FRAME**. While the FRAME stops, prizes will be given according to the winning **PAY LINES** in the FRAME.

Bonus Game




- Move the Dice Symbol to **PAY LINE**.
- **Bonus Game** will be triggered if the dice shows **BONUS**.
- Players will compete **Shoot The Darts** with the bartender for 3 rounds.
- If players' total points are more than bartender's, will win extra credits.

Free Game

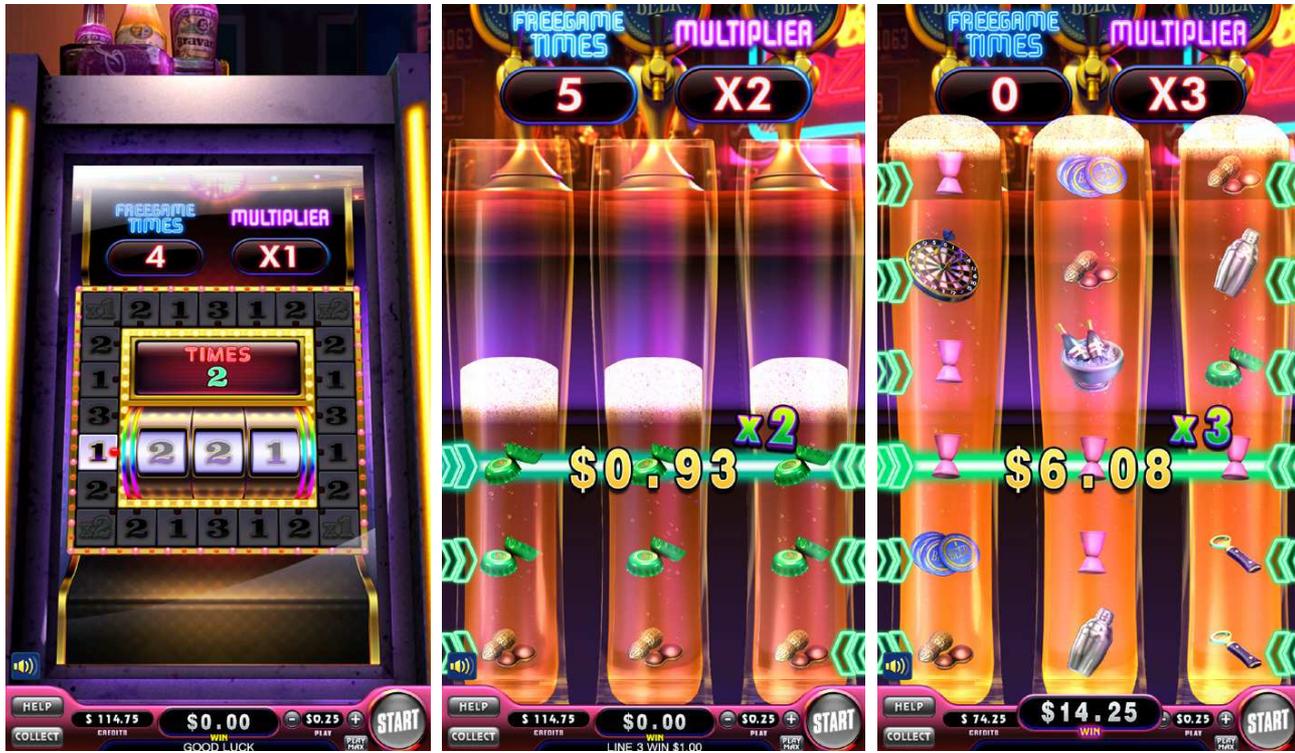

- Move the Dice Symbol to **PAY LINE**.
- **Free Game** will be triggered if the dice shows **Free Game**.
- Will play a Mini Game to decide spin times and multiplier.
- During **Free Game**, every time the Arrow symbol appears, will add one more reel and one more **Free Game**.

Jackpot

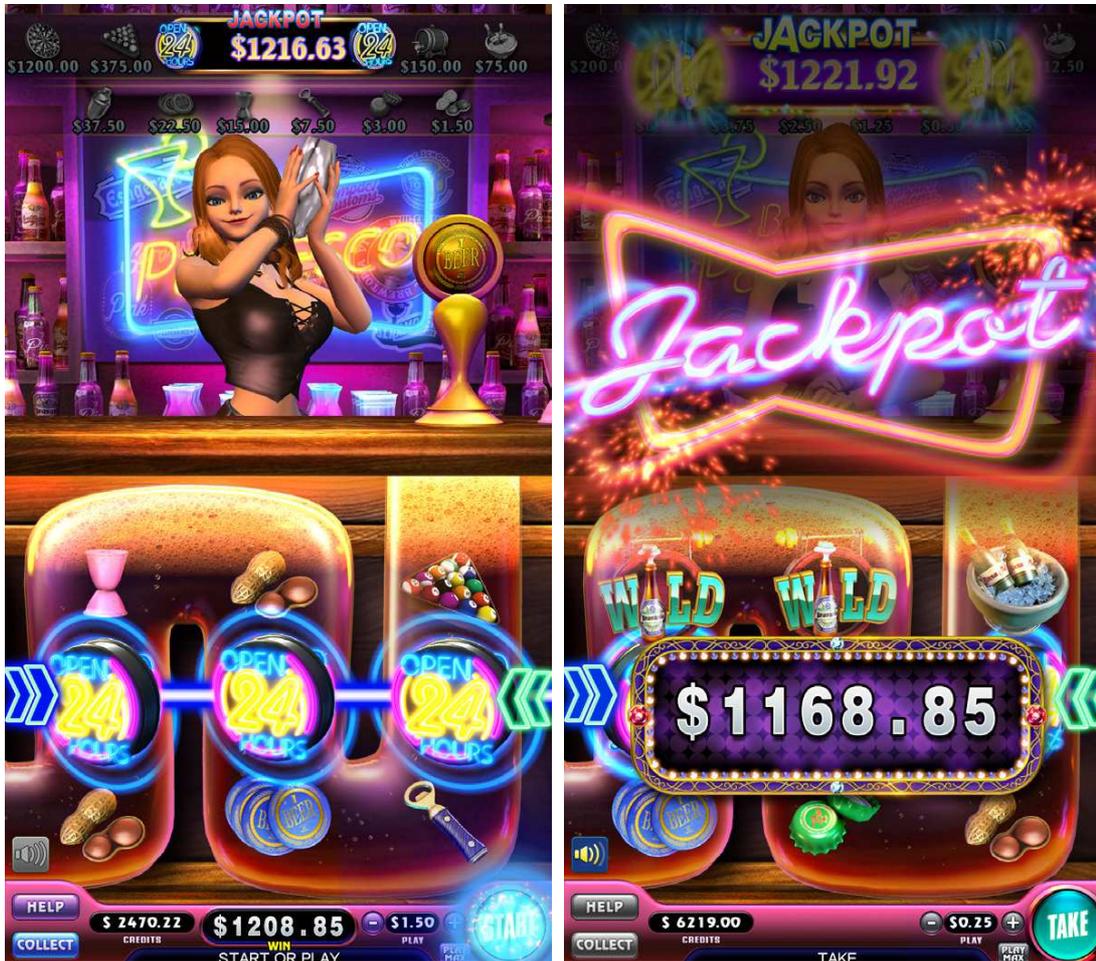

- 3 JP Symbols meets the **PAY LINE** will win JP Prize.

Line Chart



5. (Game 2) Lucky Shamrock

Game Rule



- Press + or - to adjust your play.
- Press **START** to start a new game.
- Press **RAISE** or **LOWER** to move one symbol **UP** or **DOWN**. Only one move is allowed.
- Match the Winning Combination on the pay line and win the prize accordingly.
- A game ends if players move wrong symbol.
- If the symbol matches the winning combination on the pay line after doing **NUDGE**, the player will then decide to take the winnings or keep accumulating the symbol's odds.
- While accumulating the symbol's odds to the top, will trigger the Lucky Wheel to win an extra prize; at the same time, the player has a chance to win Jackpot.
- The player is able to **TAKE** the accumulated prize after every play.

All Up Feature



- The player can **RAISE** or **LOWER** the symbol  to make it align on the pay line.

- While align the symbol on the pay line, the **ODDS** for all 3 **SYMBOLS** ,

,  will go up 1 level.

Naughty Devil Feature



- The symbol  no need to match with the pay line.
- While appearing during the game, the **Odds** for all 3 **Symbols** , ,  will drop down 2 levels. If the **Odds** are only accumulated 2 or 1 level, then they will be returned to 0.

Wild Feature



- The symbol contains a **LEVEL UP** function.
- If the symbols are aligned with
, its **Symbol Odds** will go up 2 levels.

Jackpot



- If hit the Jackpot on  Lucky Wheel, will win the JP prize.

Line Chart



6. (Game 3) Crazy Fishin'

Game Rule



- Press + or - to adjust your play.
- Press **START** to start a new game.
- Press **RAISE** or **LOWER** to move one symbol **UP** or **DOWN**. Only one move is allowed.
- Match the Winning Combination on the pay line and win the prize accordingly.
- A game ends if players move wrong symbol.

-  can substitute for all symbols except



Collective Wild Feature



- 
 When  appears in a game, it will be auto-collected on the top of each reel.

- Collective Wild feature is triggered after collecting 4  on each reel.

- When Collective Wild feature is triggered, the whole reel becomes **WILD** and will be kept on the screen for the next 3 game plays.

Scatter Game



- 3  symbols on a pay line to trigger the Scatter Game.
- Player can select to play either **Bonus Game** or **Free Game**.

Bonus Game Stage 1




- Select Bonus Game to enter the Bonus Game.
- There is only one chance to spin the reel in the Bonus Game and a player may win prizes or get fishing buoys to enter the next stage.

Bonus Game Stage 2



- Select the number of fishing buoys according to the numbers of fishing buoys won in the first stage.
- A player can select any fishing buoy on the screen and win the prizes.
- The Bonus Game ends when a player runs out of fishing buoys.

Free Game

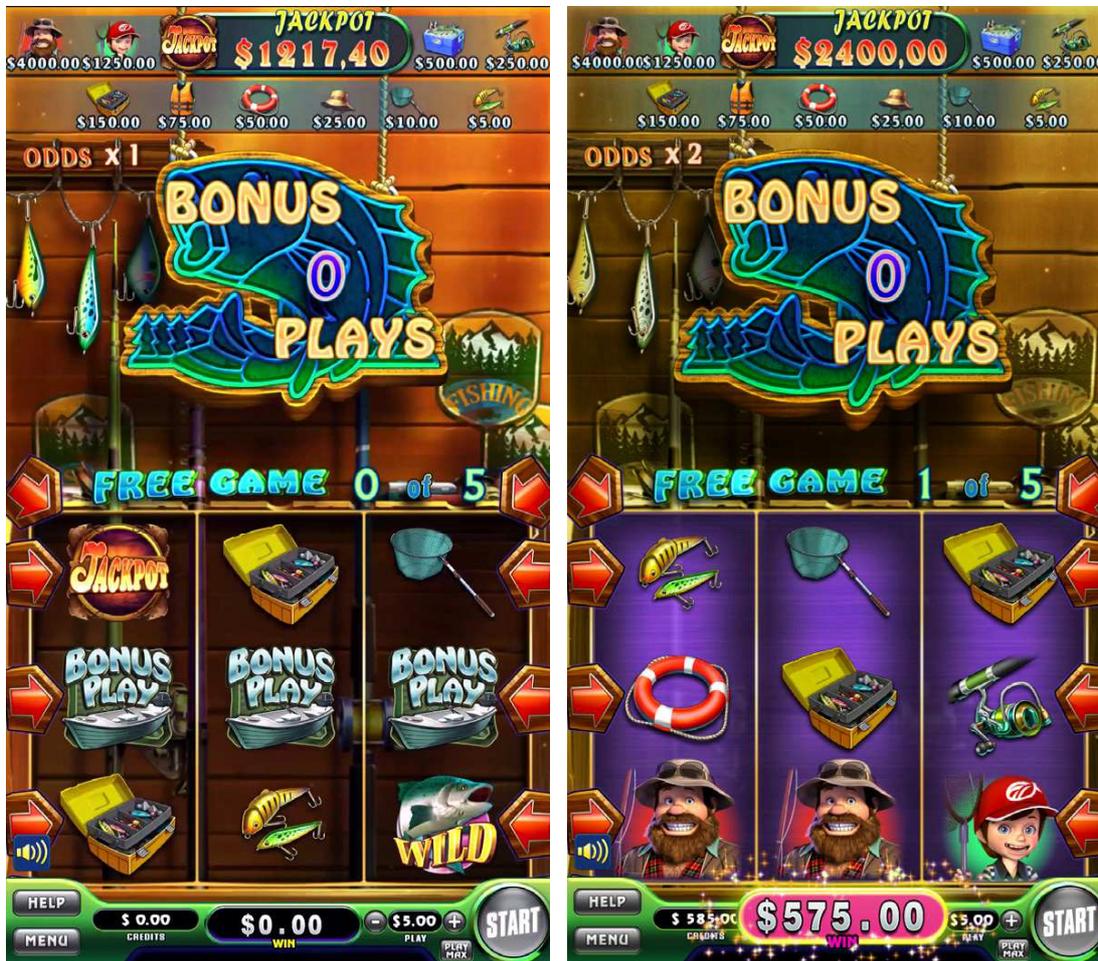

- Select Free Game to enter the Free Game and 5 free games will be awarded.
- There are 5 pay lines in the **Free Game** to increase the winning possibility.
- 5 free games will be auto-played and players do not need to nudge in the **Free Game**.
- During the **Free Game**, one  in a game will accumulate 1 time of Bonus Play.
- When the **Free Game** ends, the accumulated times will be played in the Bonus Plays.


- In the first round of Bonus Plays, **All Win** x 2 and any  in a game will accumulate more times of Bonus Play in the next round.

- In the second round of Bonus Plays, **All Win** x 3 and any  in a game will accumulate more times of Bonus Play in the next round.

- The more rounds you play, the higher multiplier you may win!

- Bonus Plays ends when there is no more  to accumulate more plays.

Jackpot

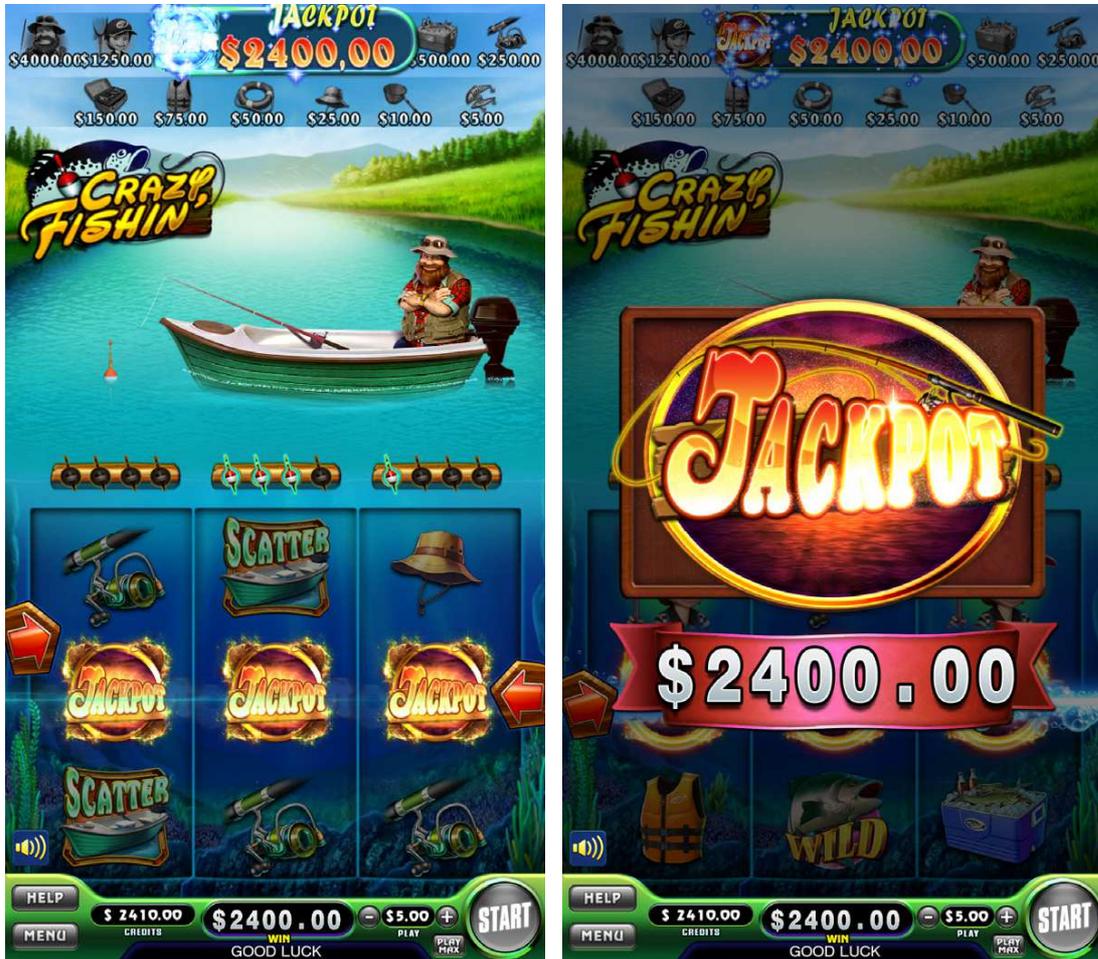

- 3 JP Symbols meets the PAY LINE will win JP Prize.

Line Chart





IGS INTERNATIONAL GAMES SYSTEM CO.,LTD.
TEL:886-2-2299 4692 FAX:886-2-2299 4687 <https://www.sales-igs.com/>

V102 US

